

esatto

This little Quick Start Guide is everything you need for your EFLW10W 10kg Front Load Washing Machine—say goodbye to the loads & loads of dirty laundry in your home!



Ready? Let's load up your EFLW10W 10kg Front Load Washing Machine!

Installation

Prior to installing your washing machine:

- Choose a solid and level surface that is away from direct sunlight.
- Remove the cardboard carton and styrofoam packaging.
- Lift the washing machine and remove the base packaging, ensuring the small triangle foam at the base is removed.
- Remove the tape securing the power supply cord and drain hose.
- Remove the inlet hose from the drum.
- Remove the transportation bolts.

Please refer to the user manual page 8 for detailed Installation instructions.

Before First Use

Before using the washing machine to clean your laundry. You must perform one complete cycle without any clothes inside using the following steps:

1. Connect the power source and water.
2. Insert a small amount of detergent into the detergent drawer and close it.
3. Turn the Program dial to select a program.
4. Press the "Start/Pause" button to begin the wash cycle.
5. After the machine has completed its full cycle, the machine is now ready for use.

Please refer to the user manual pages 11–15 for detailed Operating instructions.

Product Details

Dimensions (W, D, H mm) / **595 × 565 × 850**

Capacity/ **10kg**

Warranty / **2 Years**

We're on Socials!

 @esatto.house  @esatto.house

Washing Programs

- **Cotton:** Suitable to wash durable, heat-resistant textiles made of cotton or linen.
- **Synthetic:** Shorter and more gentle wash than a cotton wash suitable for synthetic garments such as shirts or coats.
- **Babycare:** Extra rinse perfect for baby clothes and sensitive skin.
- **Jeans:** Suitable for washing all types of denim.
- **Mix:** Suitable for mixed fabric loads that require a more intense cleaning cycle.
- **Colours:** Suitable for coloured garments.
- **Drain Only:** Very short cycle to ensure all water is removed from washing drum.
- **Spin Only:** This program can be used after a wash to remove excess water. However, the clothing will not be fully dry.
- **Rinse & Spin:** Short cycle to rinse & spin a load.
- **Wool:** Very gentle wash for wool clothes that are advised to machine wash.
- **Delicate:** This program has a gentle water flow. Suitable for delicate, washable textiles such as silk, satin, synthetic fibres or blended fabrics.
- **Quick 15:** Suitable for light loads with light soiling to get a quick clean
- **Sports Wash:** Suitable for active-wear.
- **Hand Wash:** Very gentle and slow wash for clothes suitable to be handwashed.
- **Cotton ECO:** A economical cotton cycle that uses lower temperatures and less water over an extended period of time.

Please refer to the user manual page 13–14 for more detailed Washing Program information.

Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / support@residentiagroup.com.au

How was your esatto experience?

Share your story at esatto.house/review