

Esatto

4.5kg Vented Clothes Dryer

Model: VDE45W

Here's a little **Quick Start Guide**
to help you get your **Esatto Clothes
Dryer** spinning and winning
— exactly what you need!



Esatto

4.5kg Vented Clothes Dryer

Model: VDE45W

QSG V1.2

Let's get started!

Using your dryer

After having set up the Heat Selector and Timer Dial, press the Start button. The dryer will start and work until the program is finished.

NOTE: If during the drying process the door is opened (or power is switched off), the dryer will stop working. In order to restart it, you will need to close the door (or switch the power back on) and then press the Start button. The dryer will then resume operation.


Operating your dryer

OFF

When the Timer Dial is in the 'Off' position, no power is supplied to the unit. As soon as the dial is turned clockwise to the desired program the dryer will begin.

AIR DRY

This function runs with cool air, primarily to air items that require freshening. I.e.: Clothes that have been stored for a long period of time

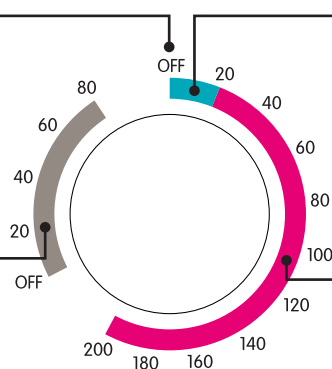

COOL

This function is generally used to cool the items that have just been dried. This helps to prevent creasing. Instead of the motor pushing heat into the drum of the dryer it will generate cool air

HOT

For drying large quantities or bulky items (Dryer drum is more than 1/2 full). Set the timer for more than 120 minutes.

Product Details

Size (mm) / **700H × 600W × 465D**

Energy Rating / **2 Stars**

Warranty / **2 Years**

Get in touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / support@residentialgroup.com.au

We're on socials!

 @esatto.house  @esatto.house

How was your Esatto experience?

Share your story at esatto.house/review