

Model/s
EBTDWW
EBTDWS

Version
V1.2 0223

Everything you need
for your **Benchtop**
Dishwasher is in
this **User Manual**

esatto

Welcome

Residentia Group

—

Head Office

165 Barkly Avenue
Burnley, Victoria
Australia 3121

—

ACN

600 546 656

—

Online

residentia.group
www.esatto.house
f @ @esatto.house

—

Postage

PO Box 5177
Burnley, Victoria
Australia 3121

—

Telephone

1300 11 4357

Congratulations on purchasing your new Dishwasher.
The Esatto brand is proudly distributed within Australia by
Residentia Group Pty Ltd.

Please refer to the warranty card at the rear of this manual for
information regarding your product's parts and labour warranty,
or visit us online at: www.residentia.group

At Residentia Group, we are customer obsessed and our Support
Team are there to ensure you get the most out of your appliance.
Should you want to learn more about your new dishwasher, it's
features or importantly taking care of the appliance, our Support
Team are here to help.

You can use our online Support Centre at anytime by visiting:
<http://support.residentiagroup.com.au>

Or you can contact us via phone by dialing: 1300 11 HELP (4357).

It is important that you read through the following use and care
manual thoroughly to familiarise yourself with the installation
and operation requirements of your appliance to ensure the most
optimum performance.

Again, thank you for choosing an Esatto appliance and we look
forward to being of service to you.

Kind Regards,
The Residentia Team

Contents

Page 04
Safety Information

Page 06
Product Overview

Page 07
Quick Start Guide

Page 09
**Installation
Instructions**

Page 14
**Operation
Instructions**

Page 16
**Preparing &
Loading Dishes**

Page 22
**Maintenance
& Cleaning**

Page 24
**Troubleshooting
Tips**

Page 26
Error Codes

Page 27
**Technical
Information**

Page 28
Warranty

Page 31
Purchase Details

Safety Information

When using your dishwasher, follow the precautions listed below:

SAFETY INFORMATION

- Installation and repair can only be carried out by a qualified technician
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision. (For EN60335-1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (For IEC60335-1) Packaging material could be dangerous for children!
- This appliance is for indoor household use only. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid. Please unplug before cleaning and performing maintenance on the appliance.
- Use a soft cloth moistened with mild soap, and then use a dry cloth to wipe it again.

DISPOSAL

- For disposing of package and the appliance please go to a recycling center. Therefore cut off the power supply cable and make the door closing device unusable.
- Cardboard packaging is manufactured from recycled paper and should be disposed in the waste paper collection for recycling.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- For more detailed information about recycling of this product, please contact your local city office and your household waste disposal service.
- **DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.**







Safety Information

When using your dishwasher, follow the precautions listed below:

EARTHING INSTRUCTIONS

- This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with an earthing conductor plug.
- The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.
- Improper connection of the equipment-earthing conductor can result in the risk of an electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded.
- Do not modify the plug provided with the appliance; If it does not fit the outlet.
- Have a proper outlet installed by a qualified electrician.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Open the door very carefully if the dishwasher is operating, there is a risk of water squirting out.
- Do not place any heavy objects on or stand on the door when it is open. The appliance could tip forward.
- When loading items to be washed:
 1. Locate sharp items so that they are not likely to damage the door seal;
 2. Warning: Knives and other utensils with sharp points must be loaded in the basket with their points facing down or placed in a horizontal position.
- Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open.
- Check that the detergent powder is empty after completion of the wash cycle.
- Do not wash plastic items unless they are marked “dishwasher safe” or the equivalent.
- For unmarked plastic items not so marked, check the manufacturer's recommendations.
- Use only detergent and rinse agents recommended for use in an automatic dishwasher.
- Never use soap, laundry detergent, or hand washing detergent in your dishwasher.
- The door should not be left open, since this could increase the risk of tripping. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- During installation, the power supply must not be excessively or dangerously bent or flattened.
- Do not tamper with controls.
- The appliance needs to be connected to the main water valve using new hose sets. Old sets should not be reused.
- To save energy, in stand by mode , the appliance will switch off automatically while there is no any operation in 30 minutes .

Product Overview

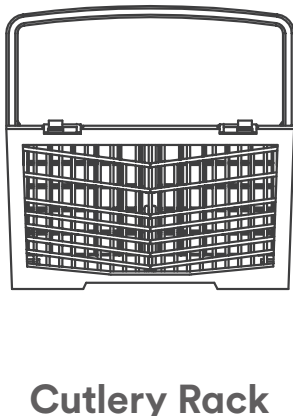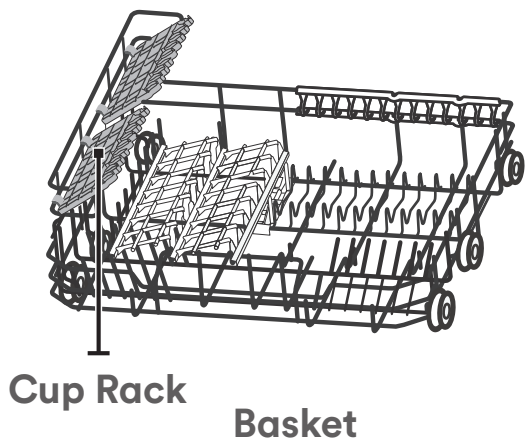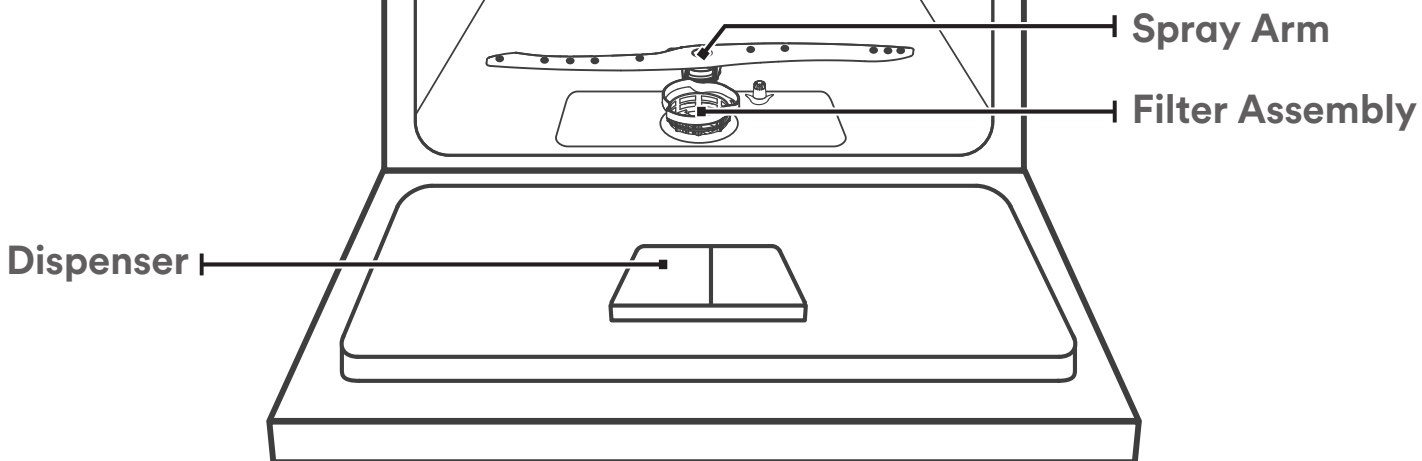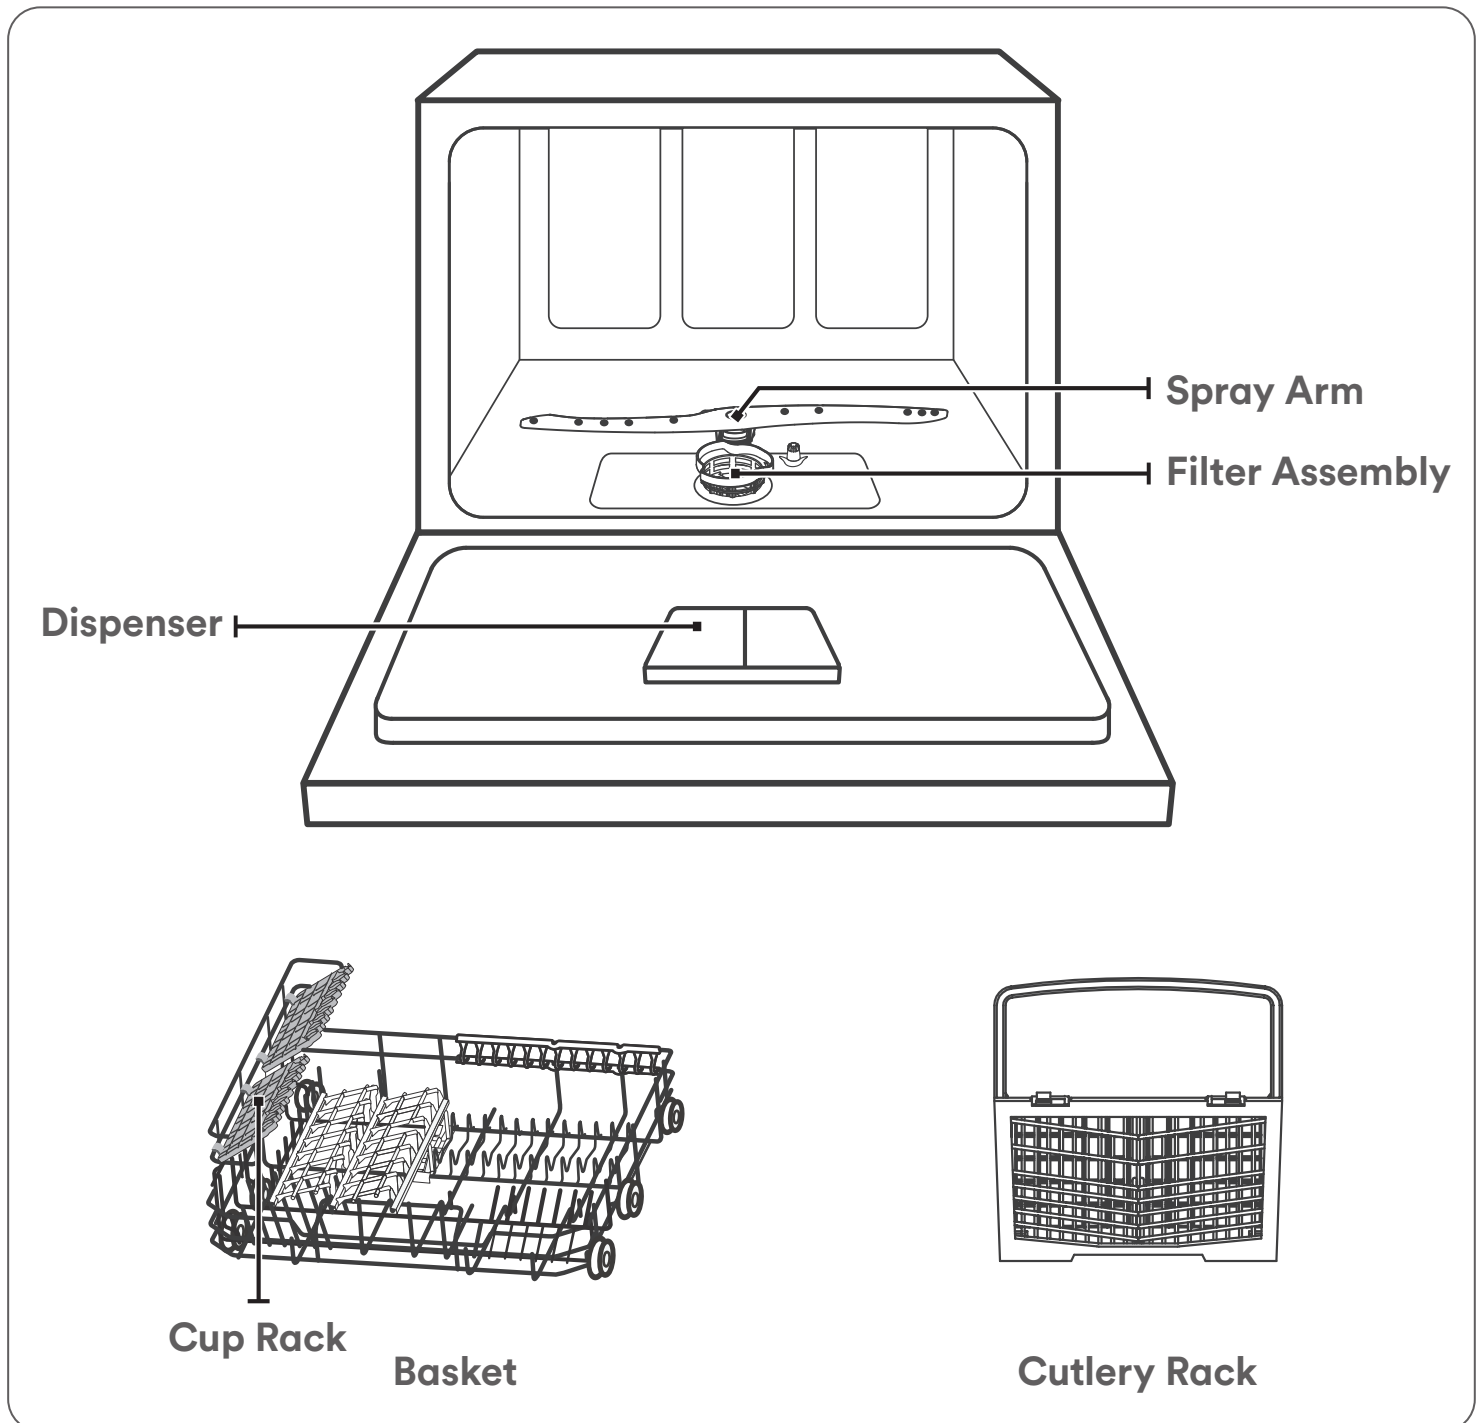

! IMPORTANT:


To get the best performance from your dishwasher, read all operating instructions before using it for the first time.

💡 NOTE:

Pictures within this user manual are for instructional purposes only, your appliance may appear differently.

Quick Start Guide


For more details on operation, please read the relevant content in this manual.

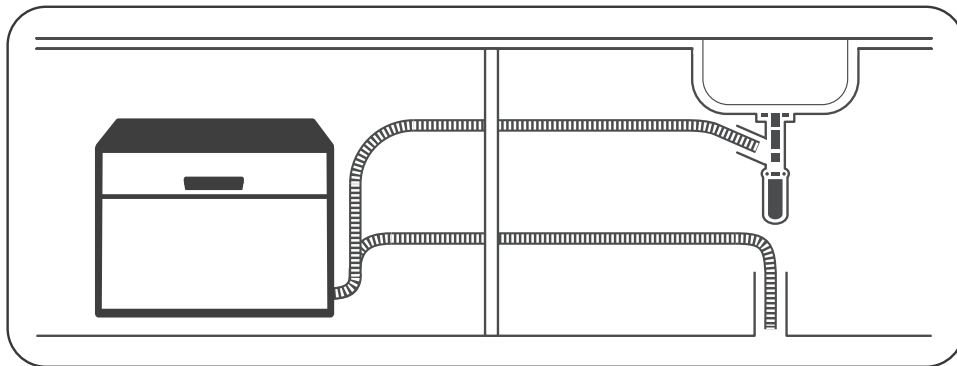


- ① Install the dishwasher (please check page 09)




- ② Remove larger residue from the cutlery

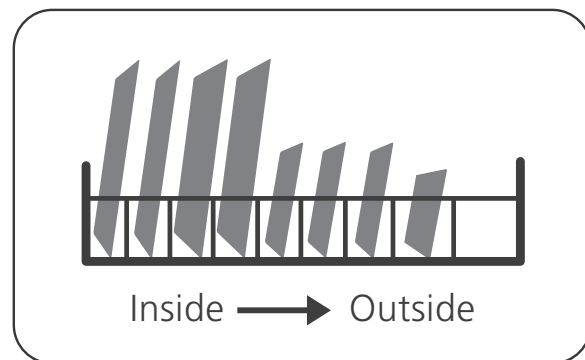

- ③ Load the baskets carefully

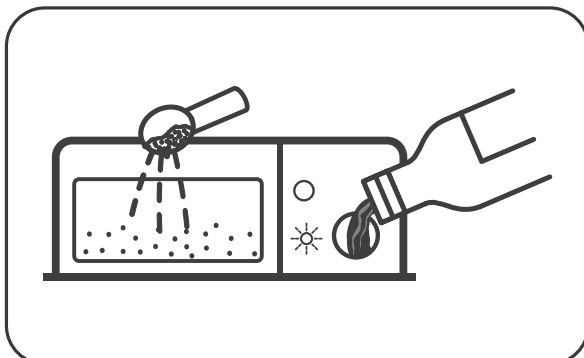

- ④ Fill the dispenser

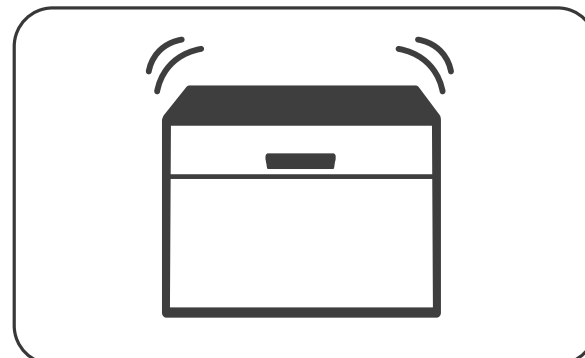

- ⑤ Select a program and start running the dishwasher

Installation Instructions

Power Connection, Water Supply & Draining

⚠ WARNING :

Electrical Shock Hazard

Disconnect electrical power before installing dishwasher. Failure to do so could result in death or electrical shock.

⚠ Attention: The installation of the pipes and electrical equipments should be done by professionals.

⚠ Ensure there is proper earthing before use

⚠ WARNING :


- Do not use an extension cord or an adapter plug with this appliance.
- Do not, under any circumstances, cut or remove the earthing connection from the power cord.

Electrical Requirements

Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10A/13A/16A, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

Electrical Connection

Ensure the voltage and frequency of the power being corresponds to those on the rating plate. Only insert the plug into an electrical socket which is earthed properly. If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the socket, rather than using adaptors or the like as they could cause overheating and burns.

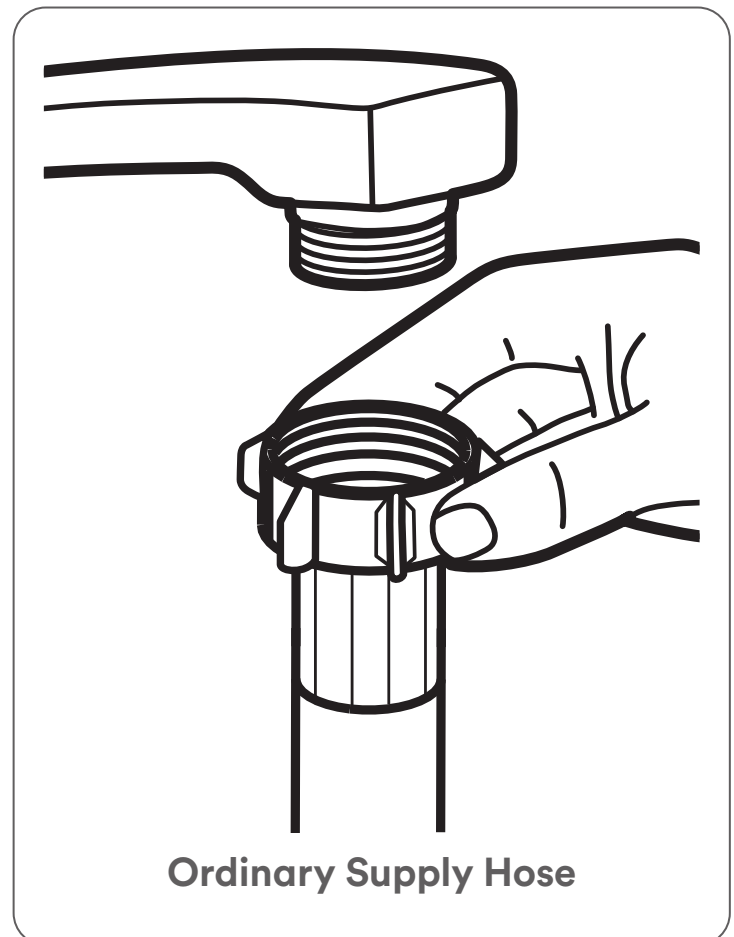

Cold Water Connection


Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10A/13A/16A, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

⚠ WARNING :

A hose that attaches to a sink spray can burst if it is installed on the same water line as the dishwasher. If your sink has one, it is recommended that the hose be disconnected and the hole plugged.

Installation Instructions

Water Supply & Draining

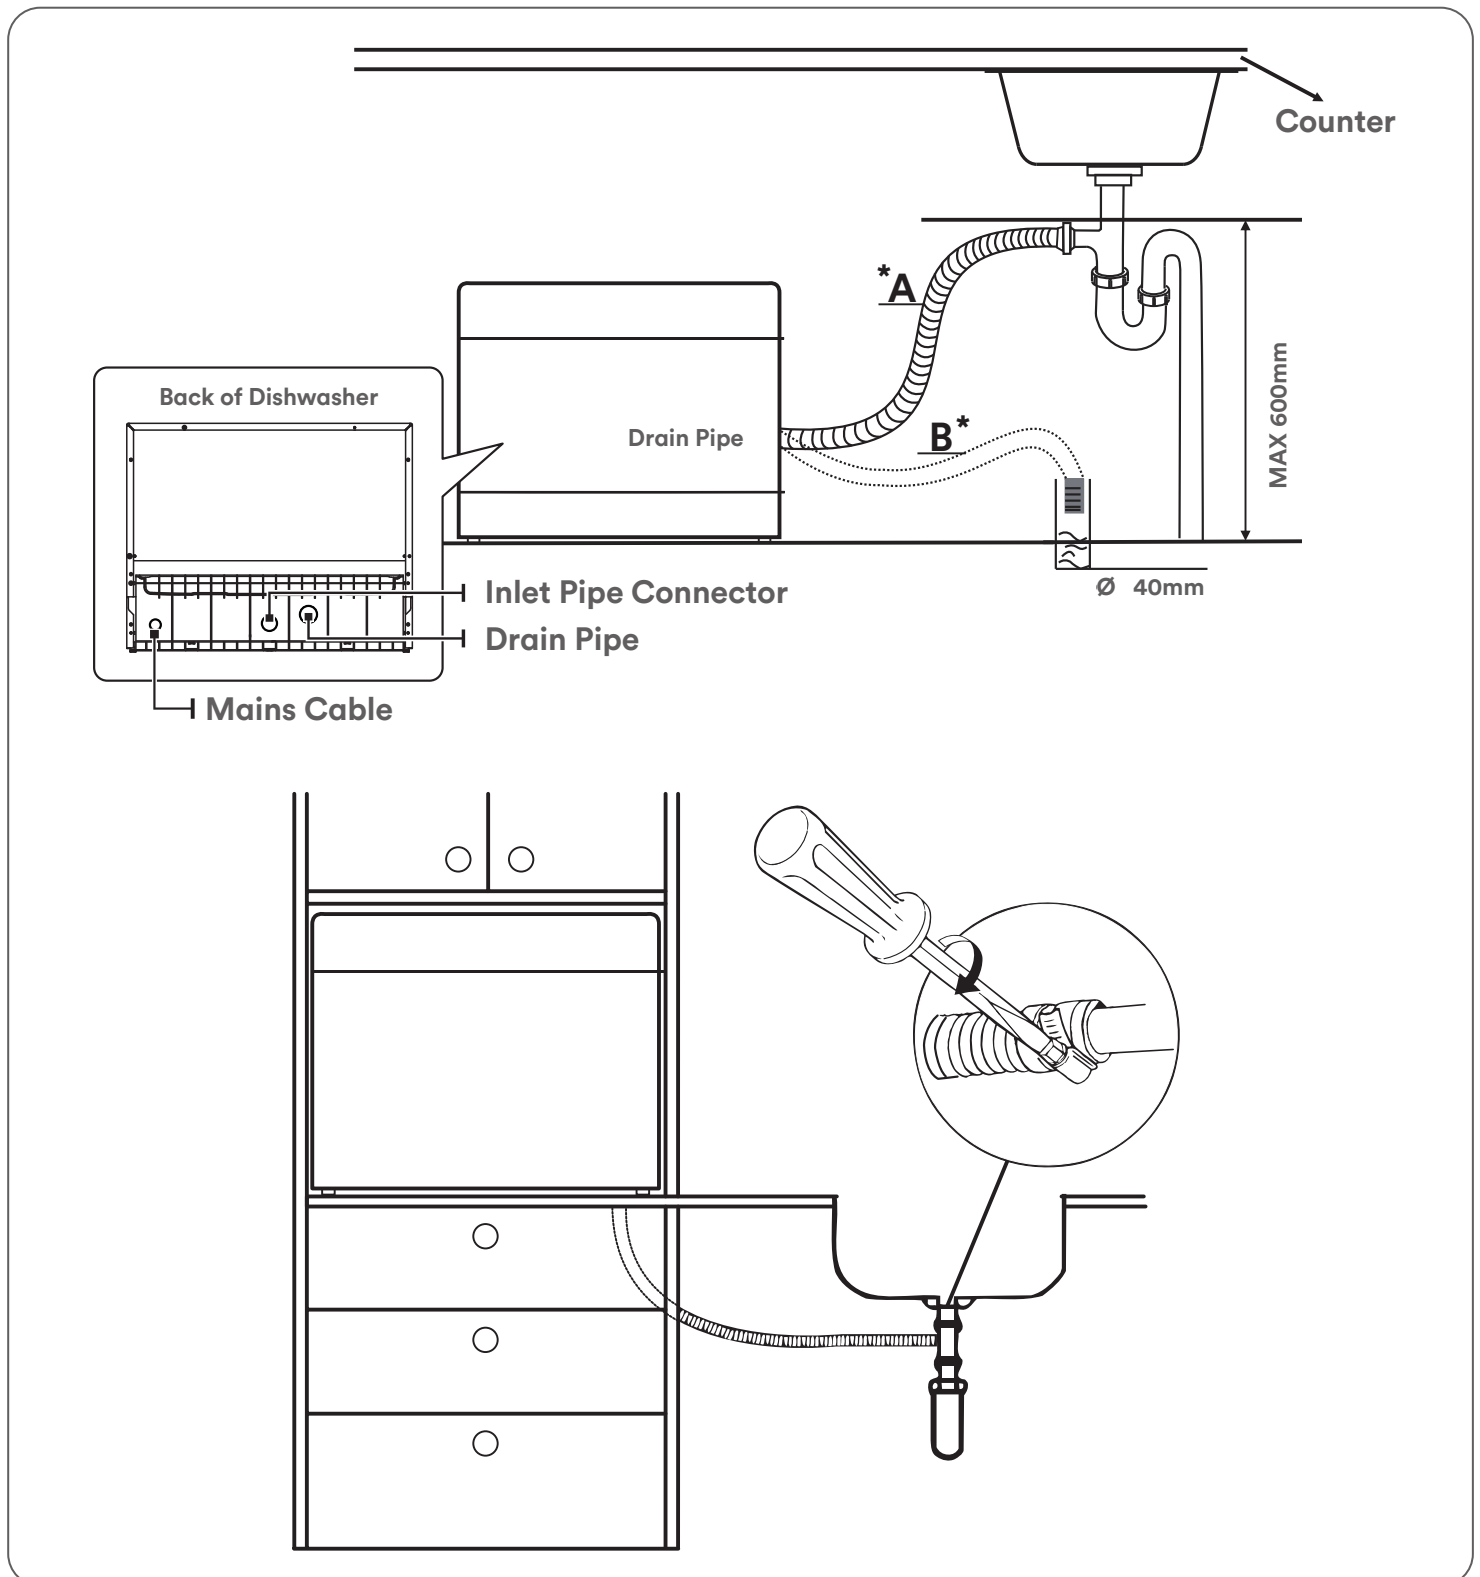

Installation Instructions

Water Supply & Draining

Connection Of Drain Hoses

Insert the drain hose into a drain pipe with a minimum diameter of 4 cm, or let it run into the sink, making sure to avoid bending or crimping it. The height of drain pipe must be less than 600mm. The free end of the hose must not be immersed in water to avoid the back flow of it.

⚠ Attention :

Please securely fix the drain hose in either position: ***A** or ***B**

How to Drain Excess Water From Hoses

If the sink is 1000 higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

⚠ Attention :

See page 27 for technical information

Water Outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water drain hose is not kinked or squashed.

Extension Hose

If you need a drain hose extension, make sure to use a similar drain hose. It must be no longer than 4 meters; otherwise the cleansing effect of the dishwasher could be reduced.

Connection


The waste connection must be at a height less than 100 cm (maximum) from the bottom of the dish. The water drain hose should be fixed.

Position the Appliance





Carefully position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned either to the right or the left sides to facilitate proper installation.

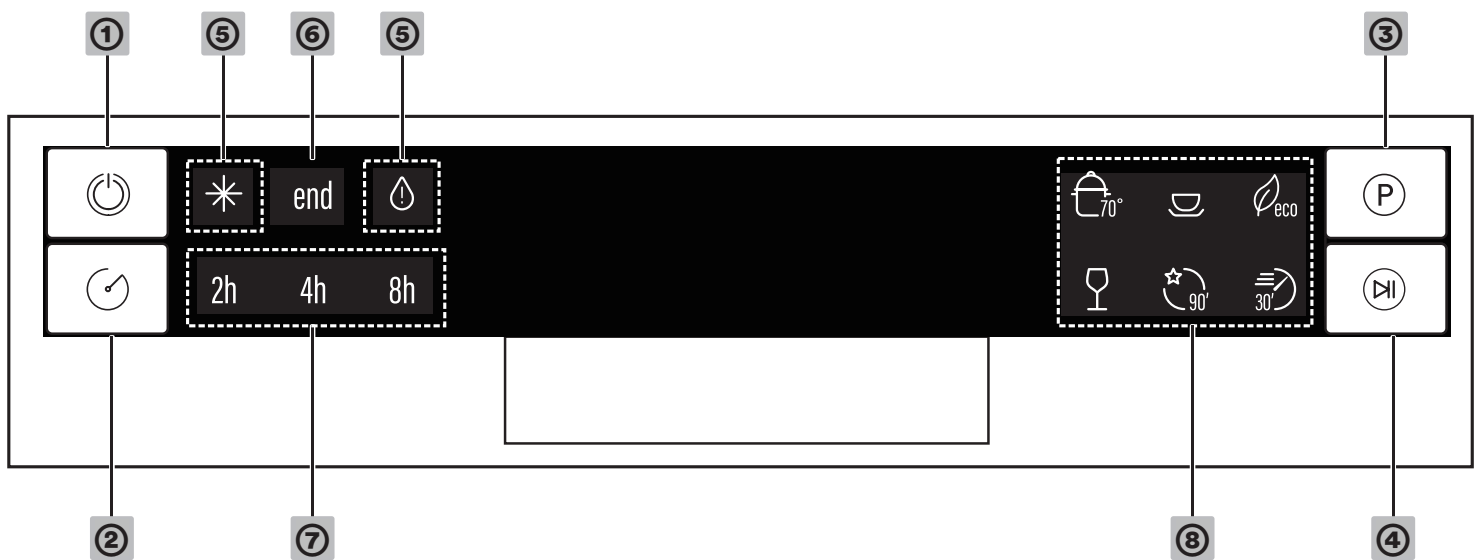Operation Instructions

Button Interface












Operation (Buttons)

<p>① Power</p>	 Press this button to turn on your dishwasher, the screen lights up.
<p>② Delay</p>	 Press the button to set up the delay time feature.
<p>③ Program</p>	 Press this button to select the appropriate washing program, the selected program indicator will be lit.
<p>④ Start / Pause</p>	 To start the selected washing program or pause it when while the dishwasher is mid-operation.

Operation Instructions

Display Interface

Display

<p>⑤ Warning Indicators</p>	<p> Rinse Aid If the “ * ” indicator is lit, the dishwasher is low on rinse aid and requires a refill.</p> <p> Water Faucet If the “  ” indicator is lit, it means the water faucet closed.</p>
<p>⑥ Progress Indicator</p>	<p>end When the program has ended, the “ end ” indicator will be lit.</p>
<p>⑦ Delay Time</p>	<p>2h To show the delay time. (2h/4h/6h/8h) 2h 4h 8h</p>
<p>⑧ Program Indicators</p>	<p> Intensive 70° C For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for a while.</p> <p> Heavy For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.</p> <p> ECO 50° C For normally soiled loads, such as pots, plates, glasses and lightly soiled pans. standard daily cycle.</p> <p> Glass For lightly soiled loads, such as glassware, crystal or fine china pieces.</p> <p> Super '90 For lightly soiled crockery and glass.</p> <p> Quick 30' A shorter wash for lightly soiled loads and quick wash. (Does not include a drying stage).</p>

Operation Instructions

Programming the Dishwasher







WASH CYCLE TABLE:

The table below shows which programs are best for the levels of food residue on them and how much detergent is needed. It also show various information about the programs.

(✓ or ✗) refers to whether or not you need to fill the Rinse-Aid Dispenser.

Note :

AS/NZS 2007.1: This program is the test cycle. The information for comparability test in accordance with AS/NZS 2007.1.

Program Title	Description of Cycle	Detergent Pre/Main	Running Time (min)	Energy (kWh)	Water (L)	Rinse-Aid Required
 Intensive 70° C	Pre-wash (50°C) Wash (55°C) Rinse x 2 Rinse (70°C) Drying	$\frac{5}{17.5g}$ (1 or 2 pieces)	140	0.85	9.7	✓
 Heavy	Pre-wash Wash (60°C) Rinse Rinse (70°C) Drying	$\frac{5}{17.5g}$ (1 or 2 pieces)	120	0.65	7.8	✓
 ECO 50° C <small>(*AS/NZS 2007.1)</small>	Pre-wash Wash (47°C) Rinse Rinse (50°C) Drying	$\frac{5}{17.5g}$ (1 piece)	135	0.45	7.4	✓
 Glass	Wash (45°C) Rinse Rinse (50°C) Drying	$\frac{22.5g}{}$ (1 piece)	70	0.45	6	✓
 Super 90'	Wash (65°C) Rinse (70°C) Drying	$\frac{22.5g}{}$ (1 piece)	90	0.65	7	✓
 Quick 30'	Wash (40°C) Rinse Rinse	$\frac{15g}{}$	30	0.32	5.8	✗

Operation Instructions

Programming the Dishwasher


STARTING A CYCLE WASH:

- ① Draw out the lower and upper basket, load the dishes and push them back. It is commended to load the lower basket first, then the upper one.
- ② Pour in the detergent.
- ③ Insert the plug into the socket. The power supply refer to last page "Technical Information". Make sure that the water supply is turned on to full pressure.
- ④ Close the door, press the Power button, to switch on the machine.
- ⑤ Choose a program, the response light will turn on. Then press the Start/Pause button, the dishwasher will start its cycle.

CHANGING THE PROGRAM MID-CYCLE

A wash cycle can only be changed if it has been running for a short time otherwise, the detergent may have already been released and the dishwasher may have already drained the wash water. If this is the case, the dishwasher needs to be reset and the detergent dispenser must be refilled. To reset the dishwasher, please follow the instructions below:

- ① Press the Start/Pause button to pause the washing.
- ② Press Program button for more than 3 seconds - the program will cancel.
- ③ Press the Program button to select the desired program.
- ④ Press the Start/Pause button, after 10 seconds, the dishwasher will start.

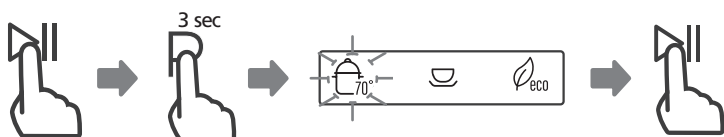

FORGET TO ADD A DISH?:

A forgotten dish can be added any time before the detergent dispenser opens.

If this is the case, follow these steps::


- ① Press the Start/Pause button to pause the washing.
- ② Wait 5 seconds; then open the door.
- ③ Add the forgotten dishes.
- ④ Close the door.
- ⑤ Press the Start/Pause button after 10 seconds, the dishwasher will start.

⚠ WARNING :

It is dangerous to open the door mid-cycle, as hot steam may scald you.


Preparing & Loading Dishes

Loading the Baskets According to AUS/NZ S 2007.1

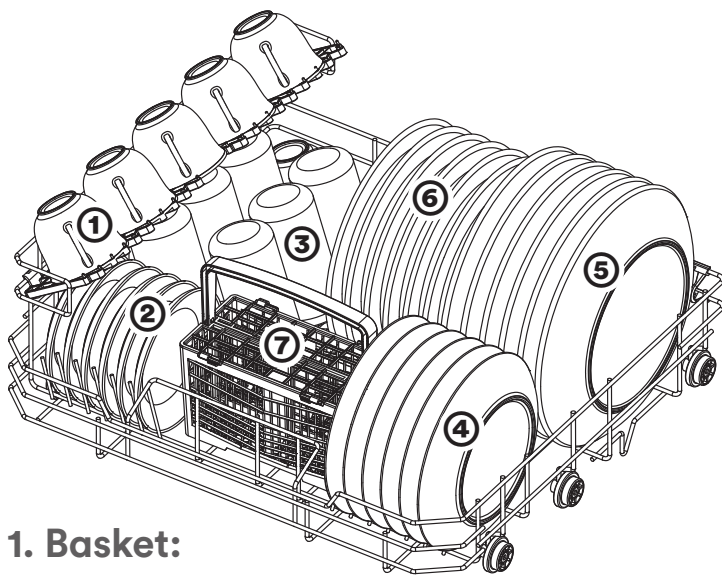


1. Basket:

No.	Item
①	Cups
②	Saucers
③	Glasses
④	Dessert Dishes
⑤	Dinner Plates
⑥	Soup Plates
⑦	Cutlery Basket

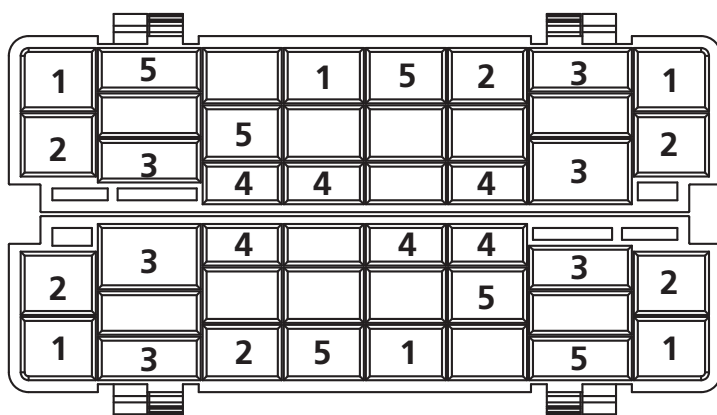

2. Cutlery Basket:

No.	Item
1	Soup Spoons
2	Forks
3	Knives
4	Teaspoons
5	Dessert Spoons

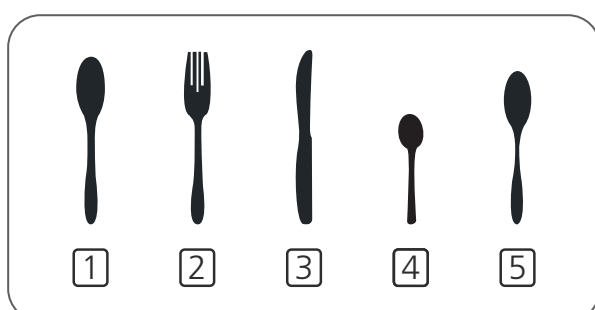

Information for comparability tests in accordance with (*AS/NZS 2007.1)

- Capacity: 6 place settings
- Program: ECO 50° C
- Rinse aid setting: 6 Detergent (Pre/main): 5/17.5g
- Door is open at the end of the drying cycle for the drying performance test (Door position: Open 50 mm)

Preparing & Loading Dishes

For Washing the Following Cutlery / Dishes

RECOMMENDED:

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans. It is not necessary to rinse the dishes under running water.

For best performance of the dishwasher, follow these loading guidelines. (*Features and appearance of baskets and cutlery baskets may vary from your model.*)

- Consider buying utensils which are identified as dishwasher-proof.
- For particular items, select a program with the lowest possible temperature.
- To prevent damage, it is important you do not take glass or cutlery out of the dishwasher immediately after the program has ended.
- Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

NOT SUITABLE:

- Cutlery with wooden, horn china or mother-of-pearl handles
- Non heat-resistant plastic items
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Items made of pewter or copper
- Crystal glass-ware
- Steel items subject to rusting
- Wooden platters, bowls etc.
- Items made from synthetic fibres

LIMITED SUITABILITY:

- Some types of glasses can become dull after a large number of washes
- Silver and aluminum parts have a tendency to discolour during washing
- Glazed patterns may also fade if machine washed frequently

RECOMMENDED LOADING METHOD:

- Items such as cups, glasses, pots/pans, etc. are faced downwards.
- Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- All utensils are stacked securely and can not tip over.
- All utensils are placed in the way that the spray arms can rotate freely during washing.
- Load hollow items such as cups, glasses, pans etc. With the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
- To avoid damage, glasses should not touch one another.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups.
- Long bladed knives stored in an upright position are a potential hazard!
- Long and / or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Please do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.

REMOVING THE DISHES:

To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first, followed by the upper basket.

WARNING :

Items will be hot! To prevent damage, do not take glass and cutlery out of the dishwasher for around 15 minutes after the program has ended.


Preparing & Loading Dishes

Loading the Baskets According to AUS/NZ S 2007.1

LOADING THE BASKET:

All tableware can't be placed face up, in order to improve the cleaning area and washing performance, it is recommended to place the dirty side towards the spray arm.


Please don't let tableware out of basket bottom to make sure not block the moving of the spray arm. The maximum diameter advised for plates in front of the detergent dispenser is of 19 cm, this not to hamper the opening of it.

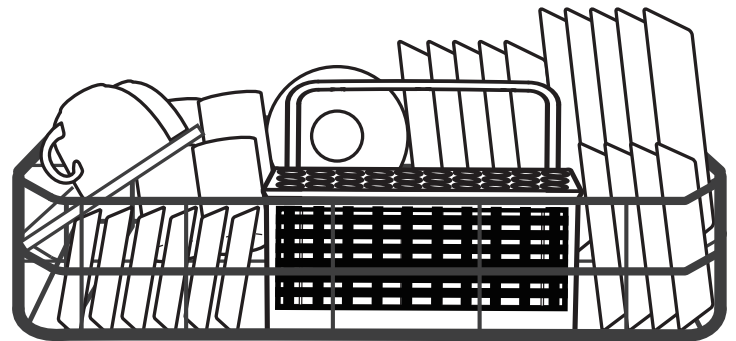

LOADING THE CUTLERY BASKET

For personal safety and a top quality cleaning, place the silverware in the basket making sure that:

- They do not nest together.
- Silverware is placed with the handles-down.
- But place knives and other potentially dangerous utensils are placed handles-up.

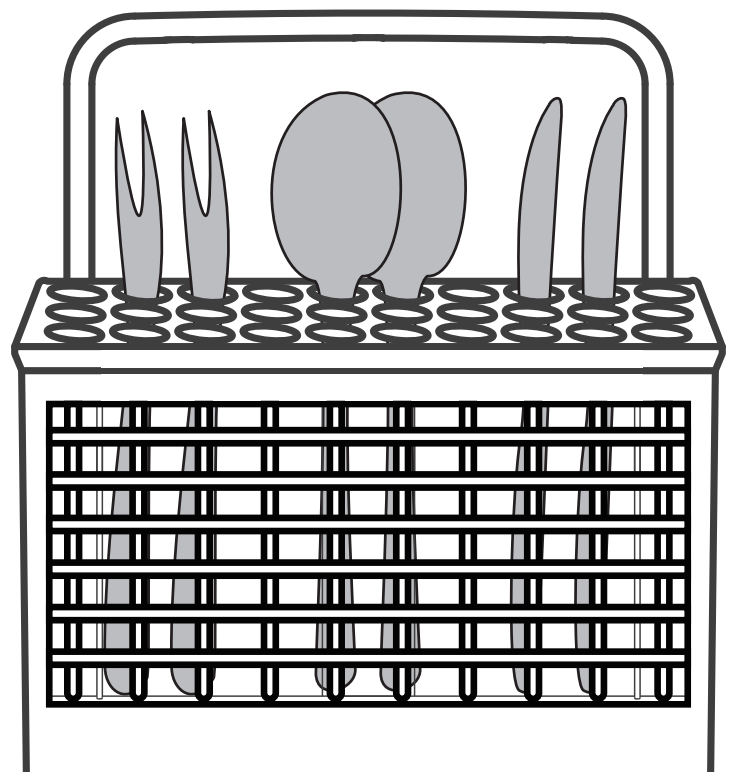

⚠ WARNING :

Do not let any item extend through the bottom. Always load sharp utensils with the sharp point down!



Preparing & Loading Dishes

Rinse-Aid & Detergent

FUNCTION OF RINSE-AID AND DETERGENT:

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. Your dishwasher is designed to use liquid rinse aids.

WARNING :

Only use rinse-aid for dishwasher. DO NOT fill the rinse-aid dispenser with any other substances (e.g. Dishwasher cleaning agent or liquid detergent). Any substance used in the rinse-aid dispenser that is not rinse-aid will damage the appliance!

WHEN TO REFILL THE RINSE-AID DISPENSER:

Unless the rinse-aid warning light (✱) on the control panel is on, you can always estimate the amount from the color of the optical level indicator located next to the cap. When the rinse-aid container is full, the indicator will be fully dark. The size of the dark dot decreases as the rinse-aid diminishes. You should never let the rinse aid level be less than 1/4 full.

As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.

● Full ● ¾ Full ● ½ Full ● ¼ Full ○ Empty

FUNCTION OF DETERGENT:

The chemical ingredients that compose the detergent are necessary to remove, crush and dispense all dirt out of the dishwasher. Most of the commercial quality detergents are suitable for this purpose.

WARNING :


- Use only detergent specifically made for dishwashers use. Keep your detergent fresh and dry.
- Don't put powdered detergent into the dispenser until you are ready to wash dishes.

Dishwasher detergent is corrosive!

Keep dishwasher detergent out of the reach of children.

Preparing & Loading Dishes


Filling the Rinse-Aid Reservoir

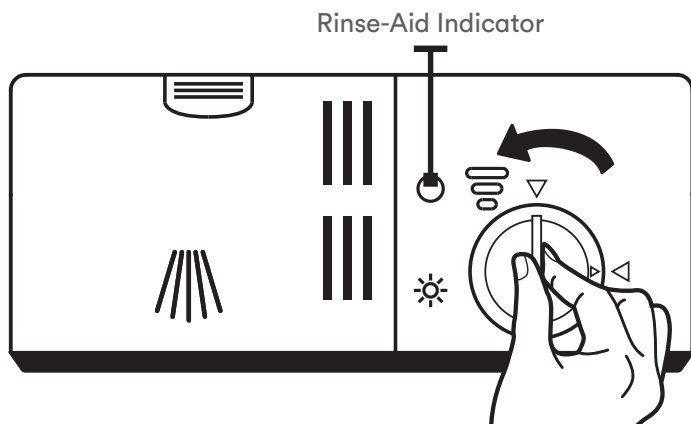

① To open the dispenser, turn the cap to the “open” (left) arrow and lift it out.




② Carefully pour in the rinse-aid into its dispenser, whilst avoiding it to overflow.

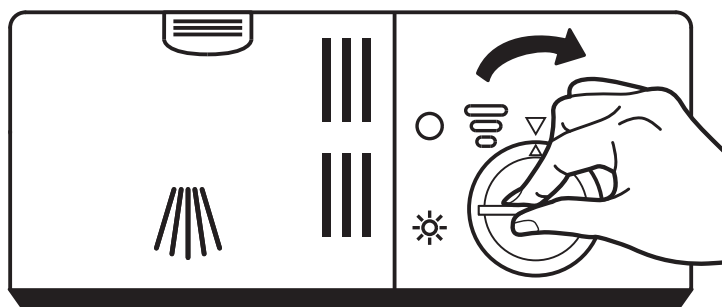

③ Replace the cap by inserting it aligned with “open” arrow and turning it to the closed (right) arrow.

⚠ Note :

Clean up any spilled rinse aid with an absorbent cloth to avoid excessive foaming during the next wash.

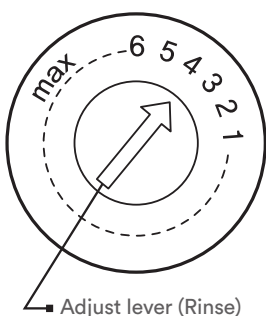


ADJUSTING THE RINSE AID RESERVOIR


The rinse aid reservoir has six settings. Both the recommended setting and the factory setting is “4”. If the dishes are not drying properly or are spotted, adjust the dial to the next higher number until your dishes are spot-free. Reduce it if there are sticky whitish stains on your dishes or a bluish film on glassware or knife blades.

Preparing & Loading Dishes


Filling the Detergent Dispenser

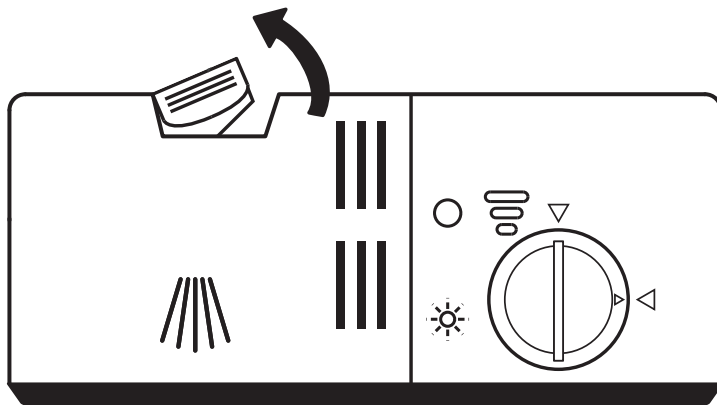

- ① Press the release catch on the detergent dispenser to open the cover.

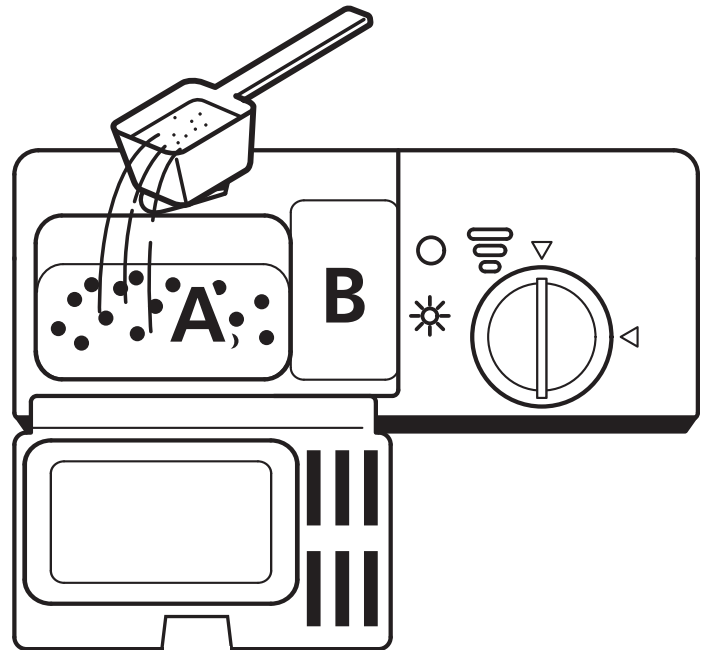

- ② Add detergent into the larger cavity (A) for the main wash cycle. For more heavily soiled wash loads, also add some detergent into the smaller cavity (B) for the pre-wash.

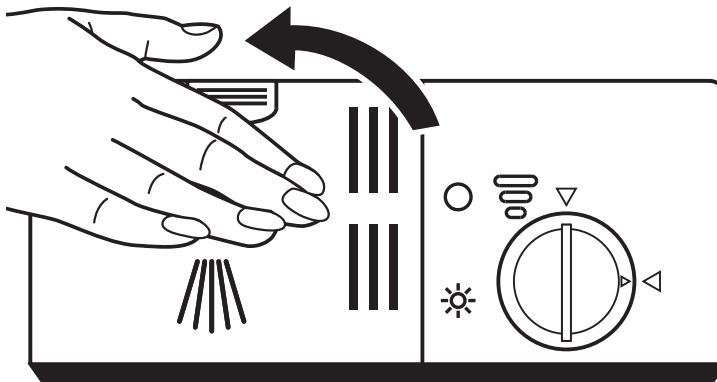

- ③ Close the cover and press on it until it locks into place.

⚠ Note :

- Be aware that depending on the soiling of water, setting may be different.
- Please observe the manufacturer's recommendations on the detergent packaging.

Maintenance & Cleaning

External & General Care

THE DOOR AND THE DOOR SEAL:

Clean the door seals regularly with a soft damp cloth to remove food deposits. When the dishwasher is being loaded, food and drink residues may drip onto the sides of the dishwasher door. These surfaces are outside the wash cabinet and are not accessed by water from the spray arm. Any deposits should be wiped off before the door is closed.

THE CONTROL PANEL:

If cleaning is required, the control panel should be wiped with a soft damp cloth only.

WARNING :

- To avoid penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.
- Never use abrasive cleaners or scouring pads on the outer surfaces because they may scratch the finish. Some paper towels may also scratch or leave marks on the surface.

FROST PRECAUTION:

Please take frost protection measures during Winter. After each washing cycle, please operate as follows:

- ① Cut off the electrical power to the dishwasher at the supply source.
- ② Turn off the water supply and disconnect the water inlet pipe from the water valve.
- ③ Drain the water from the inlet pipe and water valve. (Use a pan to gather the water)
- ④ Reconnect the water inlet pipe to the water valve.
- ⑤ Remove the filter at the bottom of the tub and use a sponge to soak up water in the sump.

AFTER EVERY WASH:

After every wash, turn off the water supply to the appliance and leave the door slightly open so that moisture and odors are not trapped inside.

REMOVE THE PLUG:

Before cleaning or performing maintenance, always remove the plug from the socket.

NO SOLVENTS OR ABRASIVE CLEANING:

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little vinegar, or a cleaning product made specifically for dishwashers.

WHEN NOT IN USE FOR A LONG TIME:

It is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last longer and prevent odors from forming within the appliance.

MOVING THE APPLIANCE:

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

SEALS:

One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.


FILTERING SYSTEM:

The filtering system in the base of the wash cabinet retains coarse debris from the washing cycle. The collected coarse debris may cause the filters to clog. Check the condition of the filters regularly and clean them if necessary under running water. Follow the steps below to clean the filters in the wash cabinet.


NOTE: Pictures are only for reference, different models of the filtering system and spray arm may be different.

Maintenance & Cleaning


Internal Care

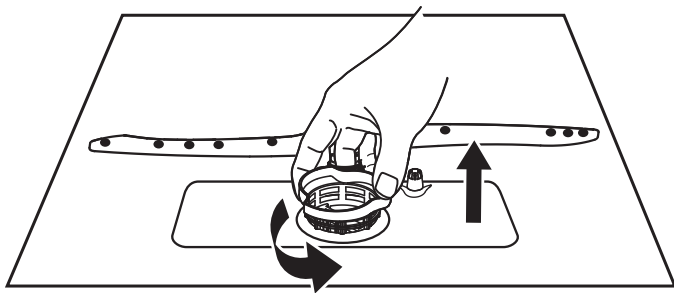


- ① Hold the coarse filter and rotate it anticlockwise to unlock the filter. Lift the filter upwards and out of the dishwasher.

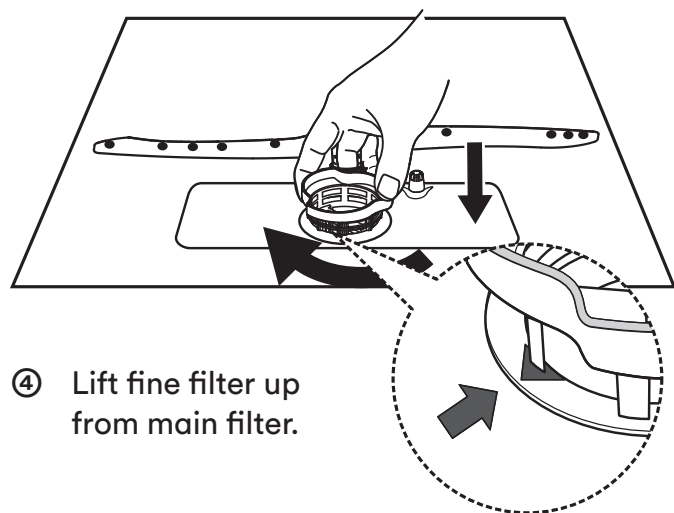

- ④ Lift fine filter up from main filter.

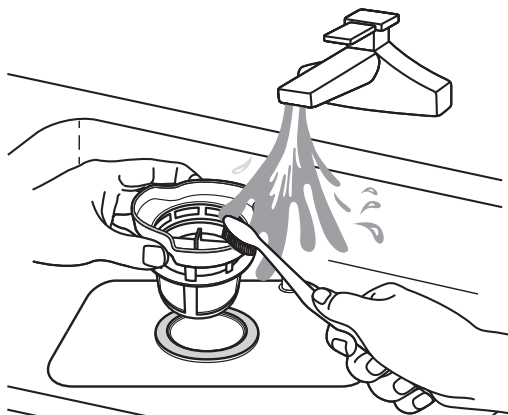

- ③ Larger food remnants can be cleaned by rinsing the filter under running water. For a thorough clean, use a soft cleaning brush.

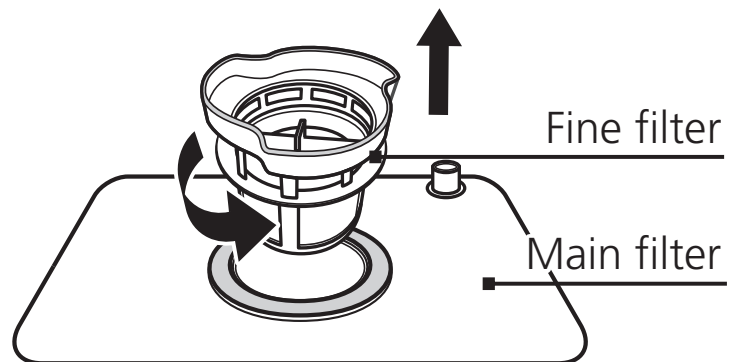

- ④ Reassemble the filters in the reverse order of the disassembly, replace the filter insert, and rotate clockwise to the close arrow.

⚠ WARNING :

- Do not over tighten the filters. Put the filters back in sequence securely, otherwise coarse debris could get into the system and cause a blockage.
- Never use the dishwasher without filters in place. Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.

SPRAY ARM:

It is necessary to clean the spray arm regularly for hard water chemicals will clog the spray arm jets and bearings.

To clean the spray arm, remove it by pulling the spray arm upwards. Wash the spray arm in soap and warm water, and use a soft brush to clean the jets. Re-fit the spray arm after rinsing thoroughly

Troubleshooting Tips

Reviewing the following pages may save you from calling for service

Problem	Possible Cause	Solution
Dishwasher does not start	Fuse has blown, or the circuit breaker tripped.	Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher.
	Power supply is not turned on.	Make sure the dishwasher is turned on and the door is closed securely. Make sure the power cord is properly plugged into the wall socket.
	Door of dishwasher is not properly closed.	Make sure to close the door properly and latch it closed.
Water not pumped from dishwasher	Kink in drain hose.	Check for a kink in the drain hose
	Filter clogged.	Check the coarse filter. (see section titled "Internal Care", pg 23)
	Kitchen sink clogged.	Check the kitchen sink to make sure it is draining well. If the problem is the kitchen sink that is not draining, you may need a plumber rather than a serviceman for dishwashers.
Suds in the tub	Improper detergent.	Use only the special dishwasher detergent to avoid suds. If this occurred, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the tub. Close and latch the dishwasher, then Start any wash cycle to drain out the water. Repeat if necessary.
	Spilled rinse-aid.	Always wipe up rinse-aid spills immediately.
Stained tub interior	Detergent with colourant may have been used.	Make sure that the detergent has no colourant.
White film on the inside surface of dishwasher	Hard water minerals.	To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent for the risk of foaming or suds.
There are rust stains on cutlery	The affected items are not corrosion resistant.	Avoid washing items that are not corrosion resistant in the dishwasher.
Knocking noise in the wash cabinet	The spray arm is knocking against an item in a basket.	Interrupt the program, and rearrange the items obstructing the spray arm.
Rattling noise in the wash cabinet	Item of crockery has fallen loose in the wash cabinet.	Interrupt the program, and rearrange the items of crockery.
Knocking noise in the water pipes	May be caused by on-site installation or the cross-section of the piping.	This has no influence on the dishwasher's function, however if in doubt, contact a qualified plumber.

Troubleshooting Tips

Reviewing the following pages may save you from calling for service

Problem	Possible Cause	Solution
The dishes do not appear clean after washing	The dishes were not loaded into the basket correctly.	See section titled "Preparing & Loading Dishes", located on pg 14)
	Program was not powerful enough.	Select a more intensive program.
	Not enough detergent was dispensed.	Use more detergent, or consider changing to another detergent.
	An item blocked the path of spray arm.	Rearrange the items so that the spray arm can rotate freely.
	The filter combination in the base of wash cabinet is not clean or is not correctly fitted. This may cause the spray arm jets to get blocked.	Clean and/or fit the filter correctly. Clean the spray arm jets.
Cloudiness or fog marks on glassware	Combination of soft water and too much detergent.	Use less detergent if you have soft water and select a shorter cycle to wash the glassware and to get them clean.
Black or grey marks on dishes	Aluminium utensils have rubbed against dishes.	Use a mild abrasive cleaner to eliminate the black/grey marks.
Detergent left in the dispenser cups	Dishes have blocked detergent the dispenser cups.	Re-load the dishes properly, as per pg 14.
Dishes not fully drying	Improper loading.	Load the dishwasher as per pg 14.
	Too little rinse-aid.	Increase the amount of rinse-aid or refill the rinse-aid dispenser.
	Dishes are removed too soon.	Do not empty your dishwasher immediately after washing. Open the door slightly so steam can escape. Begin unloading the dishwasher only once the dishes have cooled down.
	Wrong program has been used.	In short programs the washing temperature is lower. This lowers cleaning performance. Choose a program with a longer washing time.
	Use of cutlery that is made with a low-quality coating.	Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for the dishwasher.

Error Codes

If there is a malfunction, the dishwasher will display error codes to identify these:

Code	Meaning	Possible Cause
The 'Quick 30' light flickers quickly	Longer inlet time.	Faucet is not opened, water intake is restricted, or water pressure is too low.
The 'Quick 30' + 'Super 90' light flicker quickly	Not reaching required temperature.	Malfunction of the heating element.
The 'Glass' light is flickering quickly	Overflow.	An element of the dishwasher has leaked.

⚠ WARNING :


- If an overflow occurs, turn off the main water supply before calling a service!
- If there is water in the base pan because of an overflow or small leak, the water should be removed before restarting the dishwasher!

⚠ WARNING :

Items will be hot!

To prevent any injury, avoid taking glass and cutlery out of the basket for around 15 minutes after the program has ended.

Technical Information

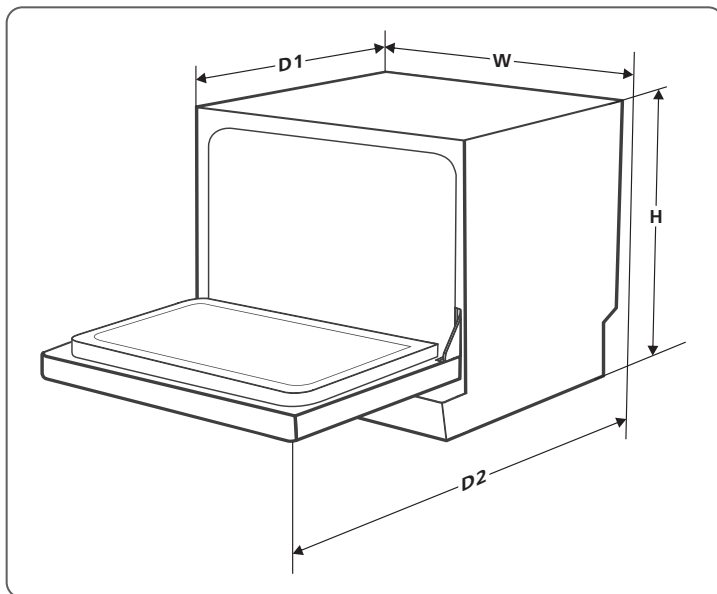

Height (H)	438mm
Width (W)	550mm
Depth (D1)	500mm (<i>door closed</i>)
Depth (D2)	812mm (<i>door opened 90°</i>)

Manufacturer	Esatto	
Type / Description	EBTDWW, EBDWS	
Standard Place Settings	6	
Energy Efficiency Class	★ ★ ☆ ☆ ☆ ☆	2.5
Water Consumption Class	★ ★ ★ ☆ ☆ ☆	3.5
Standard Cleaning Cycle	ECO 50° C	
Energy Consumption of the Standard Cleaning Cycle	0.45 kWh	
Water Consumption of the Standard Cleaning Cycle	7.4 Liter	
Program Duration of the Standard Cleaning Cycle	135 Minutes	
Noise Level	51 dB(A) re 1 pW	
Mounting	Freestanding	
Could Be Built-In	YES	
Power Consumption	1170–1380W	
Rated Voltage / Frequency	AC 220–240V/50Hz	
Water Pressure (Flow Pressure)	0.04–1.0MPa=0.4–10 Bars	

Warranty

WARRANTY TERMS AND CONDITIONS DISHWASHERS

This document sets out the terms and conditions of the product warranties for Residentia Group Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. **IN THIS WARRANTY**
 - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
 - (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
 - (c) 'Appliance' means any Residentia Group product purchased by you accompanied by this document;
 - (d) 'ASR' means Residentia Group authorised service representative;
 - (e) 'Residentia Group' means Residentia Group Pty Ltd of 165 Barkly Ave, Burnley VIC 3121, ACN 600 546 656 in respect of Appliances purchased in Australia;
 - (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Residentia Group, at its discretion, to repair an Appliance during the Warranty Period;
 - (g) 'Warranty Period' means:
 - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects for 24 months, following the date of original purchase of the Appliance;
 - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia.
3. During the Warranty Period Residentia Group or its ASR will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Residentia Group or its ASR may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Residentia Group. This warranty does not apply to light globes, batteries, filters, seals or similar perishable parts.
4. Parts and Appliances not supplied by Residentia Group are not covered by this warranty.

Warranty

5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Residentia Group or its ASR. If you reside outside of the service area, you will bear the cost of:
 - (a) travel of an authorised representative;
 - (b) transportation and delivery of the Appliance to and from Residentia Group or its ASR, in all instances, unless the Appliance is transported by Residentia Group or its ASR, the Appliance is transported at the owner's cost and risk while in transit to and from Residentia Group or its ASR.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Residentia Group is not liable in the following situations (which are not exhaustive):
 - (a) the Appliance is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation
 - (viii) failure to comply with any additional instructions supplied with the Appliance;
 - (b) the Appliance is modified without authority from Residentia Group in writing;
 - (c) the Appliance's serial number or warranty seal has been removed or defaced;
 - (d) the Appliance was serviced or repaired by anyone other than Residentia Group, an authorised repairer or ASR.
8. This warranty, the contract to which it relates and the relationship between you and Residentia Group are governed by the law applicable where the Appliance was purchased.
9. To the extent permitted by law, Residentia Group excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Residentia Group in Australia, the Appliances come with a guarantee by Residentia Group that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Residentia Group shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. Missing parts are not covered by warranty. Residentia Group reserves the right to assess each request for missing parts in a case by case basis. Any parts that are not reported missing in the first week after purchase will not provide free of charge.
13. To enquire about claiming under this warranty, please follow these steps:
 - (a) carefully check the operating instructions, user manual and the terms of this warranty;
 - (b) have the model and serial number of the Appliance available;
 - (c) have the proof of purchase (e.g. an invoice) available;
 - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Residentia Group and its ASR may exchange information in relation to you to enable Residentia Group to meet its obligations under this warranty.

IMPORTANT

Before calling for service, please ensure that the steps in point 13 have been followed.

CONTACT SERVICE

→ Service: 1300 11 HELP (4357)

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty (NZ)

NEW ZEALAND WARRANTY TERMS & CONDITIONS DISHWASHERS

To help care for your investment, be sure to register your appliance online. Registration will help you if you need to arrange service in the future, and serves as a record of your purchase—including critical information like model number and serial number – that you can refer to at any time. Simply visit the below website, or ask your retailer for help: www.esatto.house/nz/registration

WARRANTY

These products are covered by a warranty for a period of 24 months from the date of purchase, subject to the following conditions*. The warranty covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship or assembly.

* The conditions above mentioned are:

1. That the purchaser carefully follows all instructions packed with the product;
2. That the purchaser and/or installer carefully follows the installation instructions provided and complies with electrical wiring regulations, gas and/or plumbing codes;
3. That the purchaser carefully follows instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the domestic use for which it has been designed;
4. Commercial use of the product for professional or industrial purposes will void this warranty.;
5. That the product was purchased and installed in New Zealand;
6. That this warranty does not extend to:
 - a) optional glass lids for hobs apart from claims which relate to mechanical or physical damage thereof at the date of purchase;
 - b) 'consumable' parts such as light bulbs or filters;
 - c) damage to ceramic glass caused by liquid or solid spill-overs, lack of maintenance, or impact;
 - d) damage to surface coatings caused by cleaning or maintenance using products not recommended by the owner's handbook;

- e) defects caused by normal wear and tear, accident, negligence, alteration, misuse or incorrect installations;
 - f) a product dismantled, repaired or serviced by any serviceman other than an authorised service agent;
 - g) a product not in possession of the original purchaser;
 - h) damage caused by power outages or surges
 - i) damage caused by pests (eg. rats, cockroaches etc.)
7. That if the product is a freestanding microwave oven or small appliance it must be returned to the dealer/ retailer for servicing. These products, unless stated otherwise, have a 12 month warranty from original date of purchase with 24 months on the microwave magnetron; Waste disposers have a 12 month warranty.
 8. The provision of service under this warranty is limited by a 25km boundary from the retailer where the product was purchased except for microwaves. Such travelling outside of these limits will incur commercial cost to be paid by you, regulated by the number of kilometres travelled beyond the 25km limit (50km return trip). Microwaves are to be delivered to the nearest authorised service agent by the customer.

Please refer to your user manual for any further conditions that may apply to your specific model.

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantees Acts 1993.

For Service please visit www.applico.co.nz/service or contact the dealer/retailer from whom you purchased the product from or call the 0800 number listed below. If you are unable to establish the date of purchase, or the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

Registration of this warranty constitutes acceptance of the terms and conditions of this warranty.

Should you require any assistance, please call Customer Services on 0800 763 448.

Distributed by Applico Ltd. www.applico.co.nz July 2019

After registering your appliance online, we recommend you fill out the below information for your reference and keep this warranty card in a safe place.

Attach your receipt to this page



Purchase Details

For future reference, please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice.

STORE DETAILS

STORE NAME | _____

ADDRESS | _____

TELEPHONE | _____ PURCHASE DATE | _____

PRODUCT DETAILS

MODEL NO. | _____

SERIAL NO. | _____



E2447

esatto

everything
you need



A RESIDENTIA
GROUP INITIATIVE