

**esatto**

This little Quick Start Guide is everything you need to get started so that your EDW456S 45cm Compact Freestanding Dishwasher does all of your dirty work, literally!



## Get ready to use your new EDW456S 45cm Compact Freestanding Dishwasher!

### The Controls

- 1 On/Off power button
- 2 Extra Drying button
- 3 Program indicators
- 4 Delay Start indicators  
3, 6 & 9 hours
- 5 Warning indicators  
Child lock, Rinse Aid or Program End
- 6 Delay Start button
- 7 Child Lock  
Press the Delay Start & Program button  
for 3 seconds to activate.
- 8 Program button
- 9 Start/Pause button

For a complete guide on operating your dishwasher, refer to user manual on page 16–17.

### Program Cycles

- **Quick 30'**  
A quick 30 minute wash suitable for lightly soiled dishes—does not include a drying stage.
- **Super 90'**  
A fast 90 minute daily program for lightly soiled dishes.
- **Glass**  
Suitable for lightly soiled delicate glassware.
- **ECO**  
A standard program for daily use with reduced energy and water consumption.
- **Heavy**  
A program suitable for heavily soiled dishes.
- **Intensive 70° C**  
A hot intensive program suitable for heavily soiled dishes and cookware.

Note: To assist drying, we recommend partially opening the door after the program has finished.



### Product Details

Dimensions (W, D, H mm) / **448 × 600 × 845**  
 Energy Rating (MEPS/WELS) / **3 Stars / 3 Stars**  
 Capacity / **9 Place Settings**  
 Warranty / **2 Years**


Register your Esatto product online for a free additional year [esatto.house/warranty](http://esatto.house/warranty)

### Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / [support@residentialgroup.com.au](mailto:support@residentialgroup.com.au)

@esatto.house  @esatto.house

[www.esatto.house](http://www.esatto.house)