

esatto

This little Quick Start Guide is everything you need to get started, so that your EDW6004W 60cm Freestanding Dishwasher can do your dirty work, literally!



Get ready to use your new EDW6004W 60cm Freestanding Dishwasher!

The Controls


- 1 **On/Off Power Button**
Switches the dishwasher's power on and off.
- 2 **Program Selector Button**
Press to cycle through program options: Intensive, ECO, Super 90' and Quick 30'.
- 3 **Extra Drying Function**
Raises final rinse temperature to assist drying.
- 4 **Start/Pause Button**
Start or pause the selected washing program. Use to change program mid-cycle or to add forgotten dishes in a pinch.

For a complete guide on operating your dishwasher, refer to the user manual pages 11–23.

Program Cycles

- **Intensive**
For heavily soiled dishes and cookware such as pots, pans and casserole dishes.
- **ECO**
Standard program suggested for daily use, with reduced energy and water consumption.
- **Super 90'**
90 minute program for lightly soiled dishes.
- **Quick 30'**
30 minute wash suitable for lightly soiled dishes—does not include a drying stage.

Note: To assist drying, we recommend partially opening the door after the program has finished.

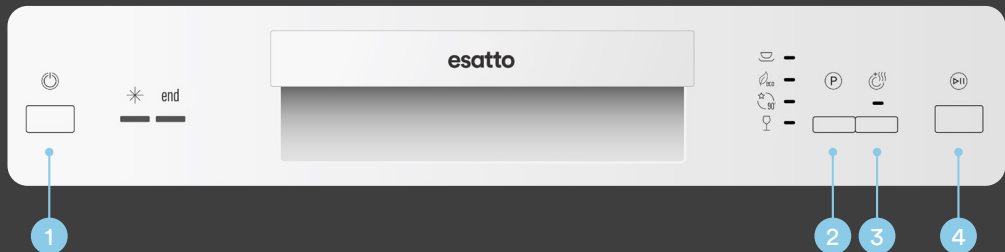

Product Details

Dimensions (W, D, H mm) / **598 × 600 × 845**
 Energy Rating (MEPS/WELS) / **3 Stars / 4.5 Stars**
 Capacity / **12 Place Settings**
 Warranty / **2 Years**

Register your Esatto product online for a free additional year esatto.house/warranty

Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / support@residentialgroup.com.au

@esatto.house @esatto.house

www.esatto.house