

**esatto**

This little Quick Start Guide  
is everything you need to get  
started so that your **EDW606CS**  
60cm Freestanding Dishwasher  
does all of your dirty work, literally!



esatto

# Get ready to use your EDW606CS 60cm Stainless Steel Dishwasher!

## The Controls

- 1 On/Off power button
- 2 Program button
- 3 Program indicator lights
- 4 LED display
- 5 Half Load function button
- 6 Child lock function button  
To activate & deactivate, press the Half Load & Extra Drying buttons together for 3 seconds.
- 7 Extra Drying function button
- 8 Additional function indicator lights
- 9 Delay Start button  
1–24 hours
- 10 Start/Pause button

For a complete guide on operating your dishwasher, refer to user manual on pages 16–17.

## Program Cycles

- **Quick 30'**  
A quick 30 minute wash suitable for lightly soiled dishes—does not include drying stage.
- **Super 90'**  
A fast 90 minute daily program for lightly soiled dishes.
- **Glass**  
Suitable for lightly soiled delicate glassware.
- **ECO 50° C**  
A standard program for daily use with reduced energy and water consumption.
- **Heavy**  
A program suitable for heavily soiled dishes.
- **Intensive 65° C**  
A hot intensive program suitable for heavily soiled dishes and cookware.

Note: To assist drying, we recommend partially opening the door after the program has finished.





## Product Details

Dimensions (W, D, H mm) / **598 x 600 x 845**  
Energy Rating (MEPS/WELS) / **3.5 / 4.5 Stars**  
Capacity / **15 Place Settings**  
Warranty / **2 Years**

Register your Esatto product online for a free additional year [esatto.house/warranty](http://esatto.house/warranty)

## Get in Touch

Need help? Contact our friendly support team via the contact details below.  
Phone / **1300 11 4357**  
Email / [support@residentiagroup.com.au](mailto:support@residentiagroup.com.au)

 @esatto.house  @esatto.house

[www.esatto.house](http://www.esatto.house)