esatto

This little Quick Start Guide is everything you need to get started, so that your EDW7CS 60cm Freestanding Dishwasher can do your dirty work, literally!



esatto

Get ready to use your new EDW7CS 60cm Freestanding Dishwasher!

The Controls

1 On/Off Power Button

Switches the dishwasher's power on and off.

2 Wash Zone Button

Switch between upper and lower wash zones.

3 Delay Start Function

Delay program start from up to 3, 6 or 9 hours.

4 Child Lock Function

Press both Delay and Wash Zone to activate.

5 Program Selector Button

6 Extra Drving Function

Raises final rinse temperature to assist drying.

7 Start/Pause Button

Start or pause the selected washing program.

dishwasher, refer to the user manual pages 18–20.

Program Cycles

Intensive

For heavily soiled dishes and cookware.

Suitable for heavily soiled dishes.

ECO

with reduced energy and water consumption.

Glass

Super 90'


90 minute program for lightly soiled dishes.

Quick 30'

30 minute wash suitable for lightly soiled

Pre-wash

Note: To assist drying, we recommend partially opening the door after the program has finished.

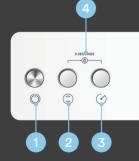





Product Details

Dimensions (W, D, H mm) / 598 × 610 × 845 Energy Rating (MEPS/WELS) / 3.5 Stars / 4.5 Stars Capacity / 14 Place Settings Warranty / 2 Years

additional year esatto.house/warranty

Get in Touch

Phone / 1300 11 4357

Email / support@residentiagroup.com.au



www.esatto.house